

How do I read my meter?

A quick guide on how to understand the display sequence

The display on the meter cycles through this sequence with consecutive presses of the yellow button.

The display will return to the default display automatically after approximately 20 secs; any button presses after this will start the sequence from the beginning.



Test (888888)

Import kW Rising Demand

Export kW Rising Demand*

kVA Rising Demand

Total imported kWh

Total exported kWh*

Total lag imported kvarh

Total lead imported kvarh**

Total lag exported kvarh**

Total lead exported kvarh

Total kVAh

Time

Date

Import kW MD Register

Export kW MD Register*

kVA MD Register

MD Reset Count

Tariff Register 1***...etc

(Other displays may appear but these are not required for billing)

* 4 channel Import/Export tariff only

** 6 channel Import/Export tariff only

*** Half hourly tariff only

N.B. The meter is programmed to automatically scroll through the highlighted displays on this list.